



















NCDOT CONNECT WorkSpace

Oak Thammavong

July 24, 2019



ORD Quarterly Updates

- Major Release in Q1 and Q3
- Minor Release in Q2 and Q4
- WorkSpace must be tested with new version
- WorkSpace must be "upgraded" with new civil data/file format change to be compatible with production version
- Everyone must be on the same ORD version and Workspace!

Bentley Delivered WorkSpace

- Mirror image used to create the NCDOT CONNECT WorkSpace
- Compared and synchronized with every ORD update
- Retrofit and use "out-of-box" settings as much as possible; e.g. civil cells, 3D custom line styles, etc.
- Some fundamental differences; One vs. Separate Workspaces, AASHTO vs. DOT Sup Prefs, Geom vs. CL, Imperial vs. English!
- "One day we will use the Bentley delivered WorkSpace." But not anytime soon.

Standalone CONNECT WorkSpace


- Not ProjectWise Managed WorkSpace
- Separate from SS2 and SS4 V8 Workspaces
- Can be installed on local drive or on shared server
- Can include other DOTs including Bentley
- Imperial English Only No Metric

WorkSpace Installation Sequence

- 1. Set Windows Environment Variables (2)
- 2. Install UpdateConnectWs App
- 3. Update CONNECT WorkSpace
- 4. Replace "WorkSpaceSetup.cfg"
- 5. NCDOT_ORD_SetupUtility.cmd (optional)
- 6. Download NCDOT ORD Training Worksets (optional)

Windows Environment Variables

- System Level Admin
 - Default
 - Admin Rights
 - Image/Deployment Package
- User Level
 - Override System Level
 - Switch Between Workspaces

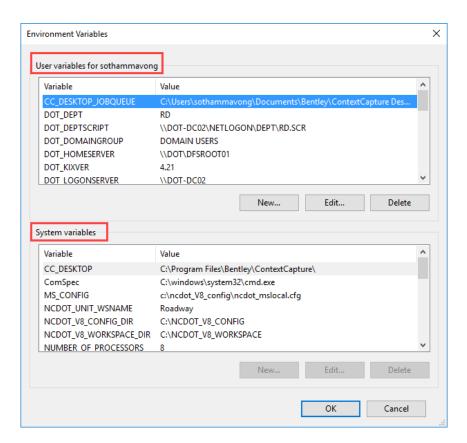

Windows Environment Variables

- ORD_CONNECT_WORKSPACE_DIR
 - C:\MICROSTATION_CONNECT_WORKSPACE
 - Needed by the UpdateConnectWs App
 - Redirect WorkSpace "Configuration" folder location
 - Rename Workspace "Configuration" folder path
 - Examples: C:\WKSP, S:\CoR\WS, W:\StantecCONNECT

Windows Environment Variables

- ORD_ORGANIZATION-CIVIL
 - NCDOT
 - Define "Organization-Civil" (DOT) WorkSpace folder
 - Examples: NCDOT, VDOT, SCDOT, Raleigh, Bentley

UpdateConnectWs App

https://connect.ncdot.gov/resources/CADD/Applications/UpdateConnectWs/UpdateConnectWs.application





UpdateConnectWS – (Testing only)

This program administers the new CONNECT ORD workspaces. Be aware that NCDOT is still in early stages of development of ORD Workspaces. Please do not use for Production!

CADD Downloads

SrvConn App



Update NCDOT CONNECT WorkSpace

NCDOT (Required), NCDOT_Roadway (Recommended)

■ UpdateConnectWs - Version: 19.7.8.2					X
Update	Information	1			
Update	Status	WorkspaceName 🔺	Details	Progress]
	V	NCDOT	41.65 MB - 7/12/2019	0%	Refresh List
	!	NCDOT_Congestion	180.54 KB - 7/8/2019	0%	
	1	NCDOT_Erosion_Control	6.65 MB - 1/31/2019	0%	Update
	!	NCDOT_Geotechnical	14.67 MB - 3/12/2019	0%	
	!	NCDOT_Hydraulics	87.47 MB - 7/3/2019	0%	n'r
	1	NCDOT_Photogrammetry	59.38 KB - 4/25/2018	0%	Ī
	V	NCDOT_Roadway	21.29 MB - 7/9/2019	0%	
	!	NCDOT_Sig_Man	17.82 MB - 7/8/2019	0%	
	1	NCDOT_Signals	46.65 MB - 7/9/2019	0%	
	?	NCDOT_Signals		0%	
	1	NCDOT_Signing	59.99 KB - 7/8/2019	0%	
	!	NCDOT_Survey	54.63 MB - 7/19/2019	0%	
	!	NCDOT_Traffic_Control	9.00 MB - 7/16/2019	0%	
	!	NCDOT_TSU	648.54 KB - 7/8/2019	0%	
	!	NCDOT_Utilities	1.84 MB - 4/26/2018	0%	
	!	NoWork Space	1.34 KB - 4/25/2018	0%	
	!	NULL	97.42 KB - 4/25/2018	0%	
	!	Template	60.00 KB - 4/25/2018	0%	
					J


Rename (view hidden files and folders enabled)-

C:\ProgramData\Bentley\OpenRoads Designer CE\Configuration\WorkSpaceSetup.cfg_default

• Copy from:

C:\MICROSTATION_CONNECT_WORKSPACE\Configur ation\Organization-Civil\NCDOT\Workspace ReadMe\ WorkSpaceSetup.cfg

- WorkSpace Structure (Configuration & Standards folder)
 - Organization-Civil NCDOT, SCDOT, Bentley
 - WorkSpaces NCDOT_Roadway, VDOT_Hydraulics
 - WorkSet (project) B-1234, R-6543, Quick Start

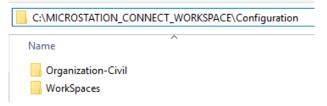

- .CFG and Standards in the same folder
- WorkSet can be different

- MY_CIVIL_ORGANIZATION_ROOT = \$(ORD_CONNECT_WORKSPACE_DIR)\Configuration\ Organization-Civil\
- MY_WORKSPACES_LOCATION = \$(ORD_CONNECT_WORKSPACE_DIR)\Configuration\ WorkSpaces\\$(ORD_ORGANIZATION-CIVIL)\
- # MY_WORKSET_LOCATION = //MyNetwork/MyWorkSpaces/


- MY_CIVIL_ORGANIZATION_ROOT
 - Define Location of "Organization-Civil" .CFG file, e.g. NCDOT.CFG
 - CFG defines location of "Organization-Civil" Standards folder
 CIVIL_ORGANIZATION_STANDARDS = \$(CIVIL_ORGANIZATION_ROOT)\$(CIVIL_ORGANIZATION_NAME)/

C:\MICROSTATION_CONNECT_WORKSPACE\Configuration\Organization-Civil\NCDOT\

- MY_WORKSPACES_LOCATION (available to select)
 - -_USTN_WORKSPACESROOT
 - USTN_WORKSPACEROOT
 - -_USTN_WORKSPACESTANDARDS= \$(_USTN_WORKSPACEROOT)Standards/
- .CFG loads Organization-Civil and WorkSpace Standards

- # MY_WORKSET_LOCATION
- If not defined or does not exist then default under WorkSpace
 C:\MICROSTATION_CONNECT_WORKSPACE\Configuration\WorkSpaces\NCDOT\NCDOT_Roadway\WorkSets
- Location of WorkSet .CFGs and .DGNWSs
- .DGNWS rsc dgn file containing project info and sheet index
- .CFG points to project CADD dgn files and Standards location

Opening a DGN File Loading of Standards

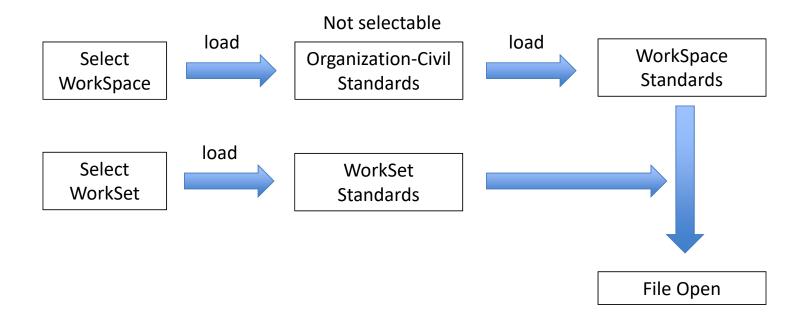

Organization-Civil NCDOT "Umbrella" Standards

- NCDOT as an Organization-Civil is not selectable
- By selecting the WorkSpace the .CFG loads the Organization-Civil Standards
- All WorkSpaces load the Organization-Civil Standards



How to Include other DOT's WorkSpaces

Separate Organization WorkSpaces Folders:

- Redefine the Environment Variable
- Desktop Icon Shortcut Switches

Combined Common Configuration Folder (put all Workspaces in a common USTN_WORKSPACESROOT folder)

NCDOT_ORD_SetupUtility.cmd

C:\MICROSTATION_CON NECT_WORKSPACE\Conf iguration\Organization-Civil\NCDOT\Workspace ReadMe\

```
MCDOT CONNECT Edition "Beta" Workspace - Setup Utility
                                                     NCDOT CONNECT Edition "Beta" Workspace - Setup Utility
  Warning: This is a USE AT YOUR OWN RISK application
 Please review and agree to these procedures prior to
  executing this setup routine. Press ESC to cancel.
  Note: This may require Administrator access for users.
Select a task:
1) COPY
            - NCDOT Configuration file
            - NCDOT Environment Variables (user level)
2) SET
            - Bentley WorkSpace
SWITCH
4) SWITCH
            - NCDOT WorkSpace
            - Bentley Default Configuration
5) RESTORE
6) DOWNLOAD - NCDOT Training Files
7) SWITCH
            - Kev-in Custom WorkSpace Name.
8) QUIT
            - Exits the program.
Type option:_
```

Explicit Configuration Variables


DGNLIB with Keyword in File Name

Default: MS_DGNLIBLIST (*.dgnlib)

- MS_DGNLIBLIST_LEVELS (*Level*.dgnlib)
- MS_DGNLIBLIST_TEXTSTYLES (*Text Style*.dgnlib)
- MS_DGNLIBLIST_TEXTFAVORITES (*Text Favorite*.dgnlib)
- MS_DGNLIBLIST_DIMENSIONSTYLES (*Dimension Style*.dgnlib)
- CIVIL_CONTENTMANAGEMENTDGNLIBLIST (*Feature*.dgnlib)

Standards Folder Structure

Organization-Civil, WorkSpace, WorkSet

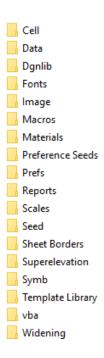

WorkSpace Standards Folders

- Cell 2D and 3D Cell Libraries
- Data NCDOT.CTB
- Dgnlib (see next slide)
- Fonts ncdotFont.rsc (font11, font23, etc.)
- Macro/VBA
- Preference Seeds UserPrefsSeed
- Scale units.def
- Seed 2D/3D Design Seed
- Seed > Sheets 2D Drawing/Sheet Seed
- Sheet Borders Plan, Profile, XS Sheet Borders (.dgn and .cel)
- Superelevation 2011/2018 Superelevation Rule Files (.XML)
- Symb Custom LineStyle Resource (V8 project scale)
- Template Library (see next slide)

Roadway Template Libraries


NCDOT_HYD_Standard Templates.itl
NCDOT_RDY_Components.itl
NCDOT_RDY_Functional Design Templates.it
NCDOT_RDY_Geometry Templates.itl
NCDOT_RDY_Linear Templates.itl
NCDOT_RDY_Specialize Templates.itl
NCDOT_RDY_Standard Templates.itl
NCDOT_RDY_Superelevation.itl
NCDOT_RDY_Surface Templates.itl
NCDOT_RDY_Workset.itl
NCDOT STR Standard Templates.itl

DGN Library (Dgnlib)

- Civil Cells 2D/3D
- Design Standards AASHTO 2011
- Display Styles Wireframe, Illustration, etc.
- Feature Definitions (see next slide)
- GUI Custom Tool boxes and Ribbon Tabs
- ItemTypePlus Used by Asset Manager for Automated Quantities
- Levels Some levels are stored in the feature definitions dgnlib
- Line Styles Custom Line Styles for ORD (annotation scale)
- Sheet Seeds Drawing Seeds for plan, Profile, and XS sheet named boundary, annotation group, and sheet creation
- Text* Text Styles and Text Favorites

^{*} Exist only in Roadway. Text Styles and Text Favorites exist in the feature definition library everywhere else.

Feature Definition DGNLIB

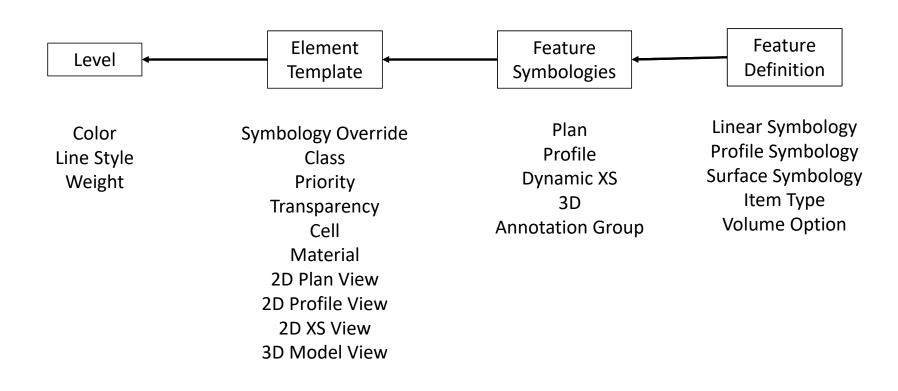

Annotation Group

- Drawing, Linear, Point
- Label elements and features for plan profile XS sheets
- Grid lines are drawing annotation definitions (not cell)
- Stored in DGNLIB (update from library next release)
- Use element templates, text styles, text favorites

Annotation Group

Linear vs, Drawing

- In Plan View, *Linear* will label the horizontal alignment tick marks, cardinal stations, PI, Curve Data, etc.
- When creating sheets, annotation takes place in the *Drawing* model, such as label the match lines and placing the north arrows.

Text Favorites

"Ad-hoc" attributes for:

- Civil Plan Elements, e.g. HAL
- Civil Profile Elements, e.g. VAL
- Civil XS Element, e.g. Segment Slope
- Microstation Element Properties, e.g. Level Name
- Microstation File Properties, e.g. Project Number (.dgnws)

Used in conjunction with Element Templates and Text Favorites

My Two WorkSpace Tech Favorites

Steve Atkinson – WorkSpace Guru

NCDIT CADD Services

scatkinson@ncdot.gov

919-707-7034

Jason Johnson (JJ)

– Consultant WorkSpace Mastermind

Kimley-Horn (Raleigh)

Jason.Johnson@kimley-horn.com

Roadway Design Dynamic Duo





Post Conference Initiative

- Form an ORD CONNECT WorkSpace focus workgroup with inputs from our PEFs and Bentley
- Reduce dependencies on environment variables
- No edits to WorkSpaceSetup.cfg (untouched)
- Seamless integration with Bentley and other DOT workspaces
- Rebuild from the ground up for ease of use